

Installation guide

Papier peint vinyle texturé amovible NOMAD-PRO

IMPORTANT

Before you start you must check the mural, make sure that there are no printing or dimensional defects. As soon as you start the installation the warranty is no longer applicable.


NON RECOMMENDED SURFACES

- Freshly painted wall (less than 3 weeks)
- Unpainted gypsum wall
- Wood or concrete wall


WALL PREPARATION

- The vinyl must be installed on a clean, dry and flat wall.
- Wash the wall well and let it dry before starting. If necessary, repair cracks or holes with filler at least 48 hours before installation.
- Remove all bulky items, such as electrical outlet plate, curtain pole, etc.


TOOLS NEEDED

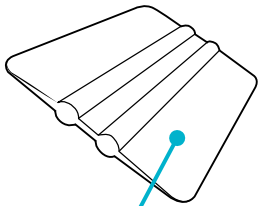


PLASTIC
SMOOTHER

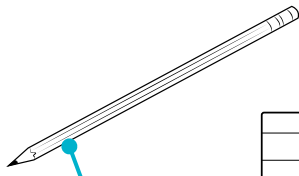


PENCIL

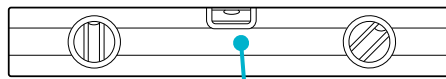


LASER OR
BUBBLE LEVEL

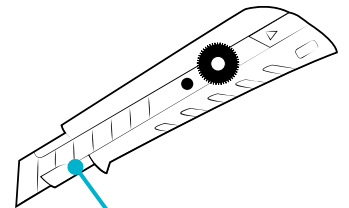


RETRACTABLE BLADE
KNIFE (X-ACTO)

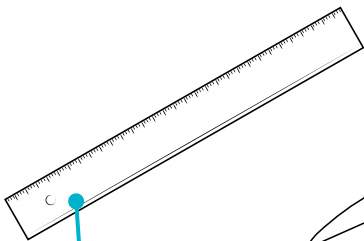

RULER

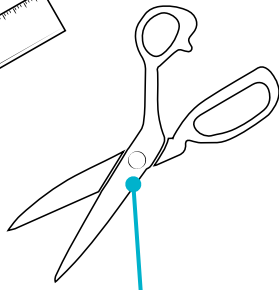


SCISSORS

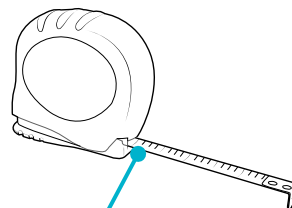

TAPE MEASURE

STEPLADDER

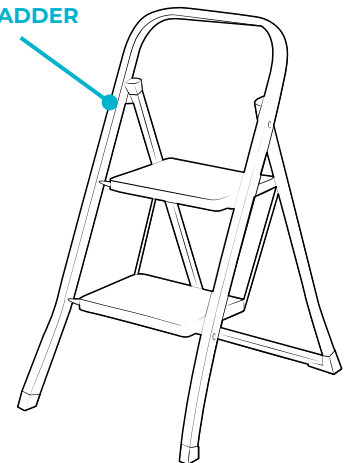

BEFORE INSTALLATION

- Your mural is numbered at the top and according to the number of strips, the first being the one on the left.
- The strips have an overlap of ½” except for the first and last strip. An overlap means that each strip must be installed ½” on top of the previous strip. EX: If you start on the left, the second strip must overlap ½” over the first and so on.
- To start the installation, your first strip must be level. Measure the width of your first strip, remove half an inch from this measurement and draw a vertical line from the left or use the laser.

START THE INSTALLATION

- Roll your first strip on itself, starting at the bottom, so that the edge is on top. Peel off the back film by about 6 inches and fold it back.
- Stick the strip on the top of the wall, leaving it protruding from ½” to the ceiling while aligning with your pencil or laser line. Using your plastic smoother, make diagonal movements from the center upwards and sideways to remove all air bubbles.
- You can take off and reposition the strips at any time.
- At this stage, it is not necessary to cut off the excess, you can wait until the very end for safety reasons and reposition it if necessary.
- Take your second strip and repeat the same steps but this time, overlap approximately ½” on the first one, making sure to have the right alignment with the pattern, at this step you can always reposition if needed. Continue in the same way until the last strip.
- Cut off the excess vinyl at the ceiling, at the bottom and on the first and last strip, using an exacto. For more precision, use a ruler to guide the blade.

NOTE

We are not responsible for the result of the installation if you made a mistake when taking measurements, preparing your wall or during installation.

If in doubt, please contact us to request an in-home consultation.

Have a good installation!

How to make the cut-out for an electrical outlet or bulky items

Using your X-Acto, cut the 2 sides and the top of the hole of the outlet, making sure to free the hole from the screw. With your squeegee, smooth and remove the bubbles all around. When everything is smooth, finalize the cut at the bottom of the plug hole, always making sure to free the screw hole. You can put the plug plate back in place.

How to remove the product

Remove the vinyl from the wall by peeling it off slowly.

Tip from the pro!

If you go carefully, you can even reuse your mural on another wall.